



## Pengo 4k グラバーアプリガイド

### 1. Non Upgrade App を解凍してください

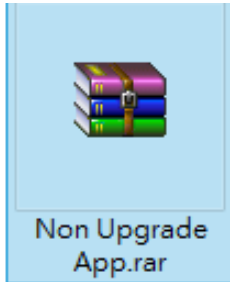


- \*本アプリは WindowsOS にのみ対応します
- \* WindowsOS のバージョンにより、示されたインターフェースが本ガイドと若干異なる場合があります
- \*本アプリをインストール及び使用する時、同時にたくさん他のアプリを使用することをなるべく避けてください。


### 2. 解凍後 Non Upgrade App のフォルダを開き, Setup.msi もしくは setup.exe をダブルクリックしてください

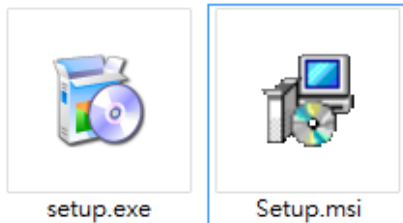


### 3. Setup.msi をダブルクリックした後の画面は以下となり、Next をクリックしてください

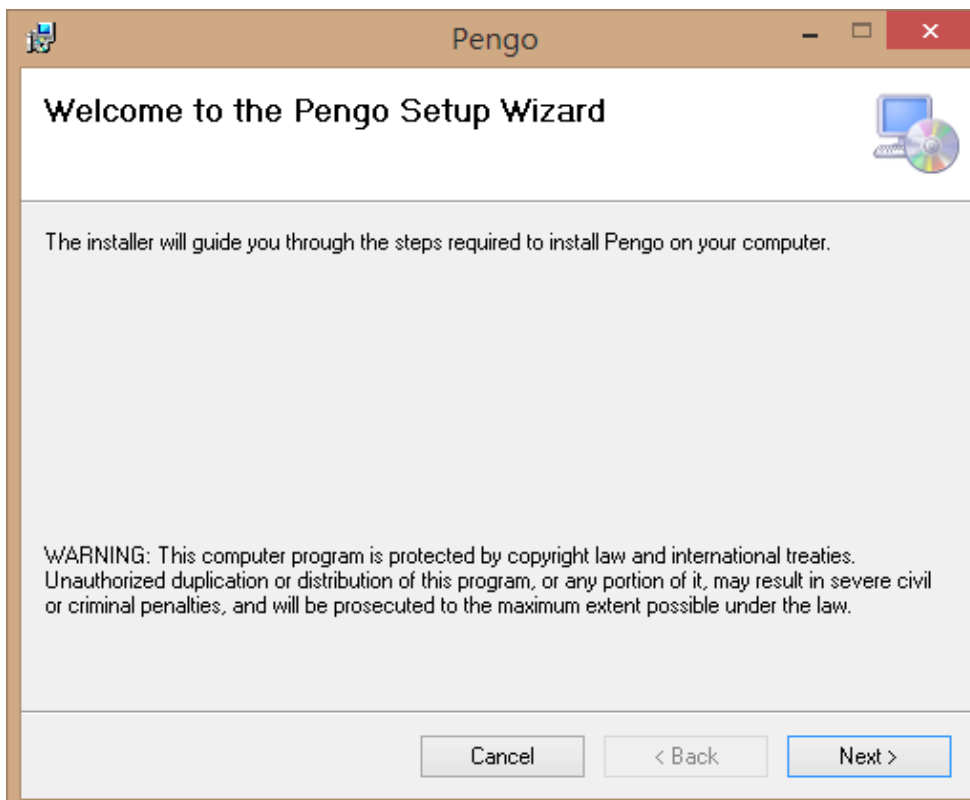


### 4. インストールの位置を選択した後、Next をクリックしてください

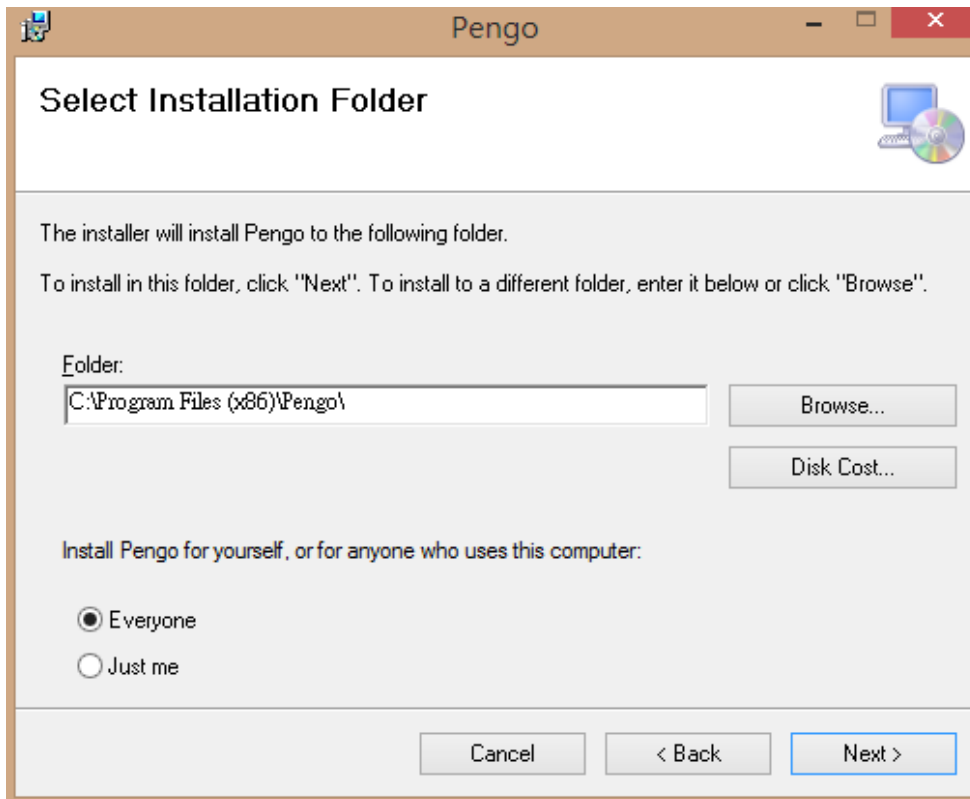

5. Next をクリックしてください

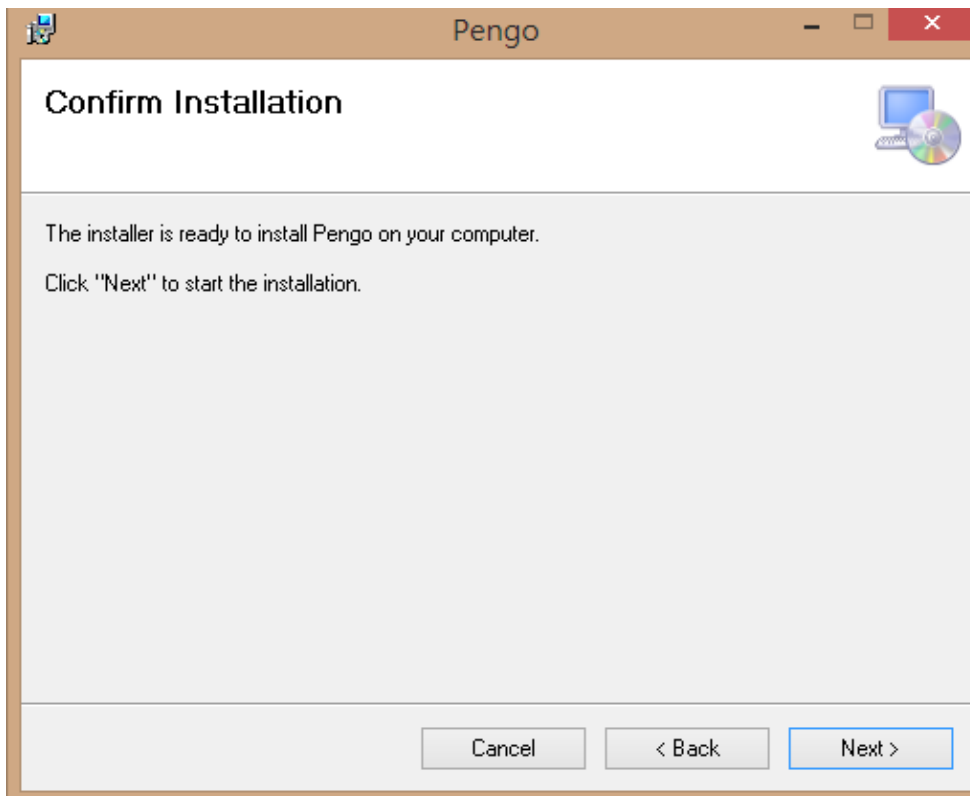


6. インストールが終わった後 Close をクリックしてください

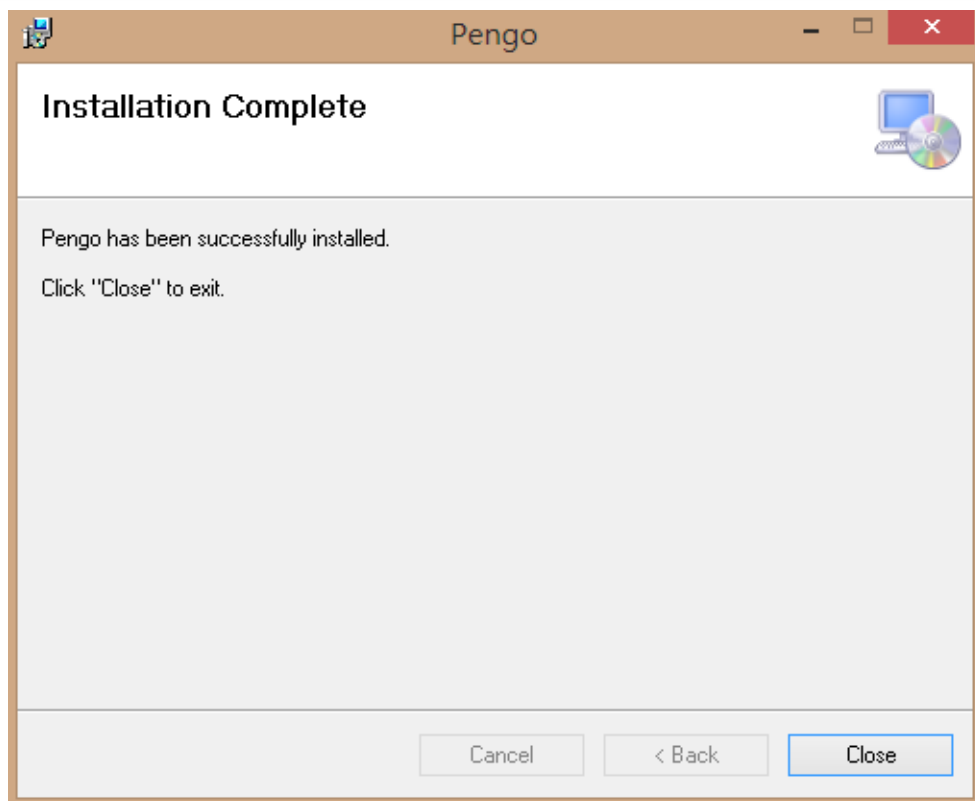

7. インストールが終わった後、デスクトップに表示される Pengo.exe ショートカットをダブルクリックしてください




8. アプリのインターフェースは以下となり、グラバー本体をご使用の PC に接続してください。

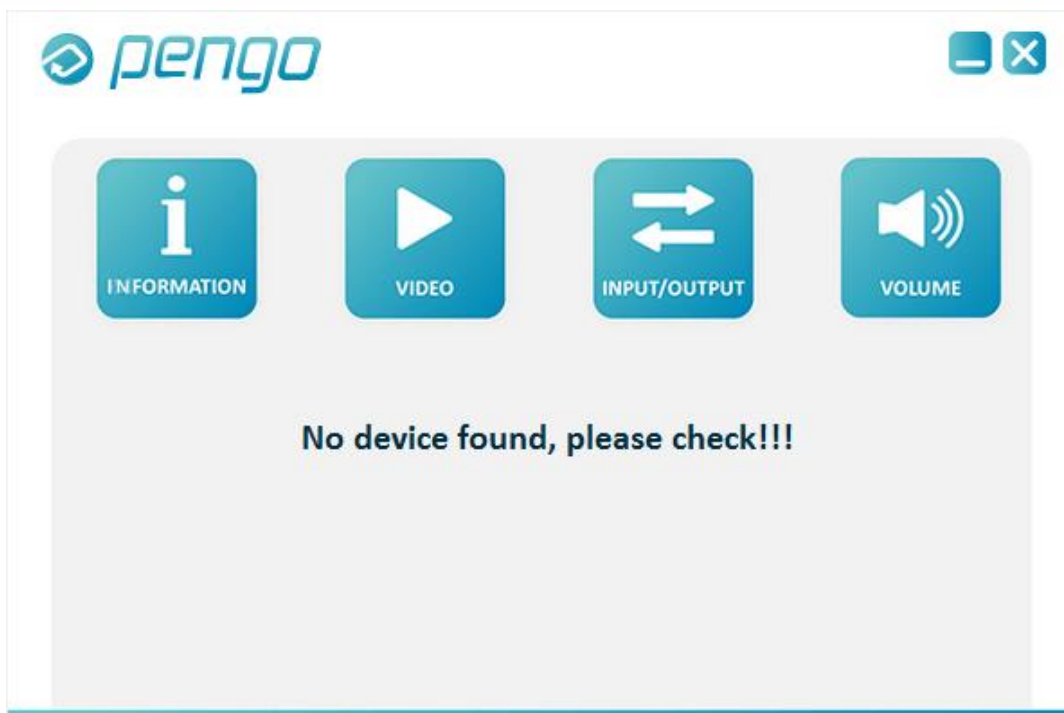


9. グラバーが認識されると画面は以下になります



10. Video のアイコンをクリックすると、入力・パススルー・キャプチャ側の映像フォーマットをチェックすることができます

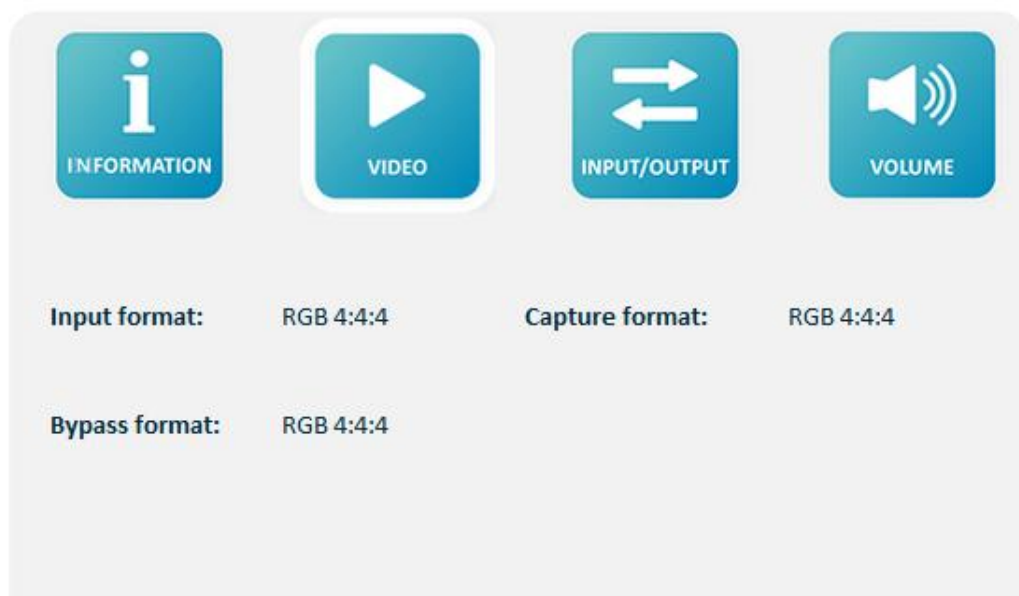

11. INPUT/OUTPUT のアイコンをクリックすると、入力・パススルー・キャプチャ側の映像解像度をチェックすることができます

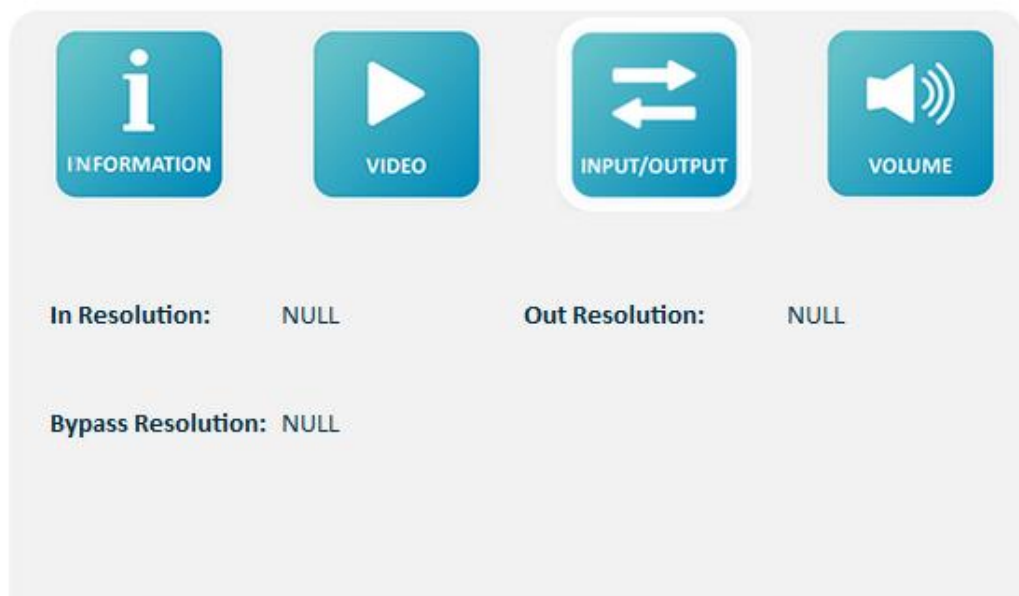

12. VOLUME のアイコンをクリックすると、マイク、イヤホンおよびシステムの音量を調整できます



The image shows a software control interface for a Pengo device. At the top left is the Pengo logo, and at the top right are window control icons (minimize and close). Below these are four main function buttons: INFORMATION (with an 'i' icon), VIDEO (with a play icon), INPUT/OUTPUT (with a double-headed arrow icon), and VOLUME (with a speaker icon). The VOLUME button is highlighted with a white border. Below the buttons are three volume sliders, each with a speaker icon and a value of 100. The first slider is for headphones, the second for a microphone, and the third for a speaker.

Device	Volume Level
Headphones	100
Microphone	100
Speaker	100